


■ TYRE SPREADER ■



33705-67

Tyre spreader for workbench

■ MECHANICAL TYRE SPREADER ■

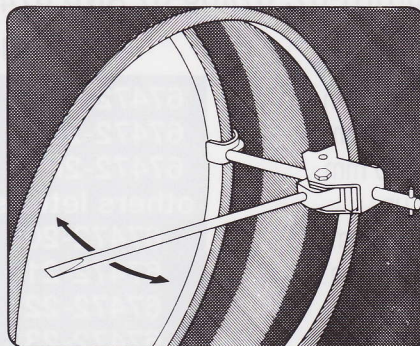

R 1245-1

R 881-1

FEAPE: weight 2,5 kg
For trucks
FAOJE: weight 5,5 kg
For earthmovers

■ REPAIR TABLE ■



67214-67

Repair table

This is an essential component for all truck or earthmover repair stations.

This highly mobile trolley (4 swivel wheels) accompanies the operator

and ensures that all the necessary repair tools are immediately available.

Table alone: L 55 x W 55 x H 115 cm.

Weight: 35 kg

The trolley includes:

- an air filter with regulator and 3 metres of hose, culminating in quick connector for fast changing of buffers without the need for tools
- a fixed notch for holding a clamp chuck, leaving one hand free
- two covers on each side ensuring availability of 2 tyre spreaders
 - inclined display unit for tools
 - a circular ramp for manoeuvring the trolley
 - two intermediate shelves
 - a revolving upper plate

■ KIT FOR E.M. TYRES TEST ■



65128-67

Contents:

- 6 yellow tyre chalks S 4305-J
- 1 probing awl 33374-67
- 1 screwdriver 10 x 200 65127-67
- 1 45° nose expansion plier, outside clips 65126-67
- 1 multigrip plier 67220-67
- 1 std cores & caps screwdriver tool R 1255-1
- 1 EM cores & caps screwdriver tool R 1469-1
- 1 std tool for repairing S 4259-1
- 1 EM tool for repairing S 769-1
- 1 EM pressure gauge Eurodaira 38039-99
- 1 std swivel coupler for angled air chuck R 38-1
- 1 stainless steel std tyre tread depth S 4464-1
- 1 stainless steel EM tyre tread depth 67077-67

LIFT SUPPORT AND TYRE SPREADERS

For trucks and earthmovers

Schrader

■ TYRE SPREADER-LIFT SUPPORT 300 KG ■

Truck and small earthmover



67201-67

Tyre spreader-lift support allowing the operator to work at a comfortable height without having to bend down. Possible intermediate positions. Appliance to be embedded. Necessary working surface 3m².

Maximum lifting capacity: 20,5 R 25

Maximum size capacity without lifting: 23,5 R 25

Lifting strength at 12 bar: 200 kg

Lifting strength at 15 bar: 300 kg

Lifting stroke: 450 mm

Air inlet: 1/4"

Maximum pressure: 16 bar

Size: L 1,2 x l x 0,8 x h 0,90 m

Weight: 160 kg

Low position:
Place the tyre on the 2 rollers. Install the claws and spread the (beads) of the tyre.

High position:
With the gear lever, lift the tyre spreader unit. Control unit with shelf for tools.

■ LIFT-SUPPORT FOR EARTHMOVER 1,5 T ■



67208-67

Mobile support for fetching an earthmover tyre, bringing it to the workstation and, once repaired, to the vulcanization station in complete safety.

This lift complies with work safety standards (delivered with a certificate of conformity)

Lifting capacity:


from 20,5 R 25 to 33,25 R 35

Lifting strength: 1,5 T.

Lifting stroke: 800 mm.

Size: L 1,6 x l 1,5 x h 2 m

Weight: 270 kg

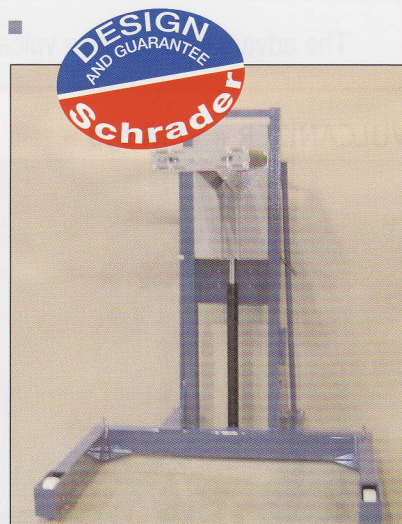

It is equipped with 2 rollers making it possible to hold the tyre vertically and allow it to turn while leaving the center of the tyre free for improved access of the operator, in particular in the case of tires 25".

The lower part of the tyre is free to allow the installation of the straps of a vulcanizer VSM 200. The appliance can be grounded. Each castor is equipped with a protect-feet

Other tyre spreaders and E.M. supports

3T.: P/N 67210-67
7 T.: P/N 67213-67

ON REQUEST

Support 7T.

